



ETSY CRAFT PARTY

SUNGLASS COZY INSTRUCTIONS



made to create **BERNINA**

SUNGLASS COZY

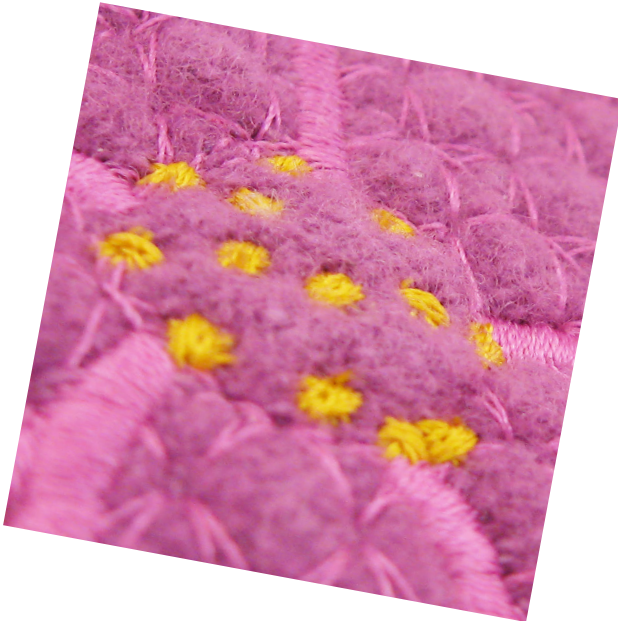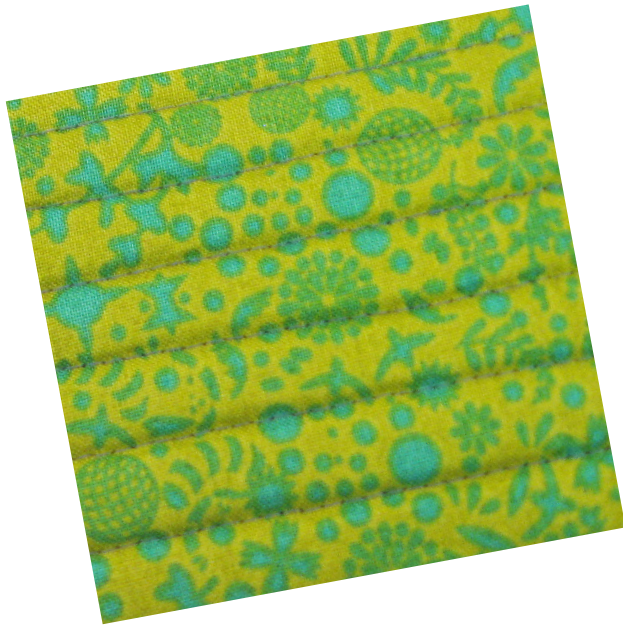

MATERIALS

- BERNINA Sewing Machine
- BERNINA Free Hand System
- Reverse Presser Foot #1
- Binder Attachment #88 38MM
- Binder Foot #95
- Patchwork Foot #37
- Three Sole Walking Foot #50 with Central Guide sole attached
- 90/14 Quilting Needle
- Clover Wonder Clips
- By Annie's Soft and Stable
- Temporary Spray Adhesive (optional)
- Stiletto
- Fabric marking pencil
- Two Cotton Fabrics at least 9" X 9"
- Cotton Fabric for Binding 1-1/2" X 12"
- Thread for construction, quilting and topstitching binding
- Rotary Cutter, Ruler and Mat

SUNGLASS COZY



QUILT IT!



- Cut two 9" X 9" squares from cotton fabrics (front and back)
- Cut one 9" X 9" square from Soft and Stable

Create a quilt sandwich using the Soft and Stable as batting. Baste together with a few pins or Temporary Spray Adhesive.

Mark a line across the center of the quilt sandwich. Change the stitch length to 3.0. Attach the Walking Foot #50 and lining up the blade of the Central Guide to the marked line stitch the first line of quilting.

Use the edge of the Walking Foot as a guide and quilt the rest of the case with straight line quilting. Embrace imperfect lines – it will give the project character.

Trim the quilted piece to approximately 8" X 8".

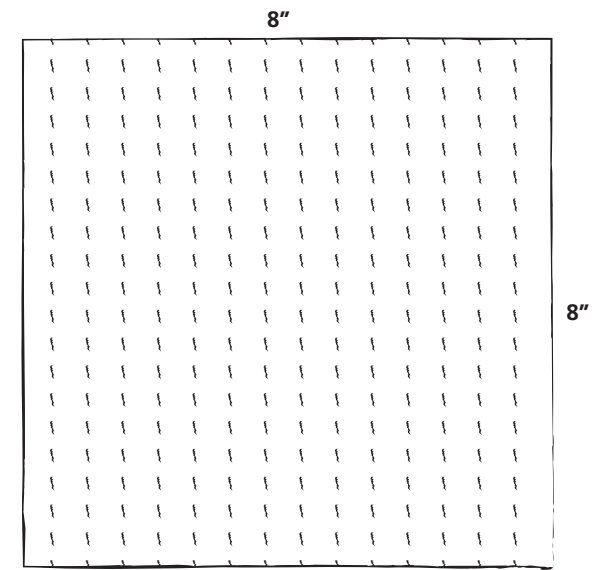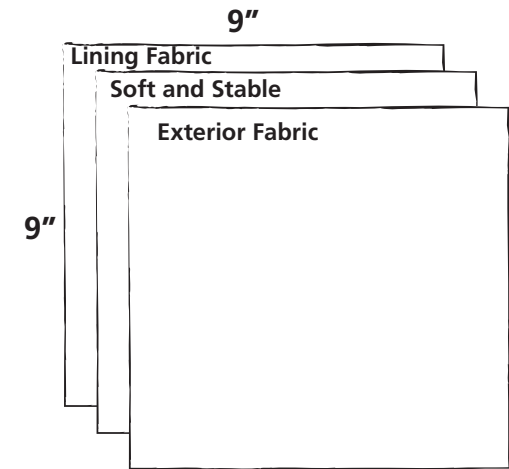

SUNGLASS COZY




BIND IT!

Attach Binder Foot #95 and the Binder Attachment #88, 38MM, to the machine. Setup the binder as indicated in the directions or watch the video at bernina.com. Prepare the binding strip by pressing with a light starch. Using the stiletto insert the strip into the binder attachment. It is easier to feed if you first cut the binding at a diagonal.

Once inserted through the binder align under the presser foot and adjust the needle position so that it comfortably will sew through the binding and project (Approximately right 3 positions.) Sew just the binding for a few stitches and adjust as desired.

Feed the top of the quilt sandwich through the binder attachment. Make sure the sandwich is snuggled tightly against the binder attachment so all layers are enclosed in the binding. Bind the top and a bit off the edge and then remove fabric from the attachment.

Trim the binding to the edge of the quilt sandwich.

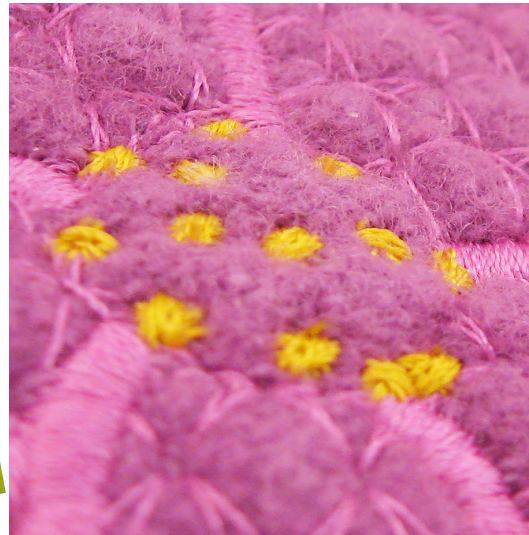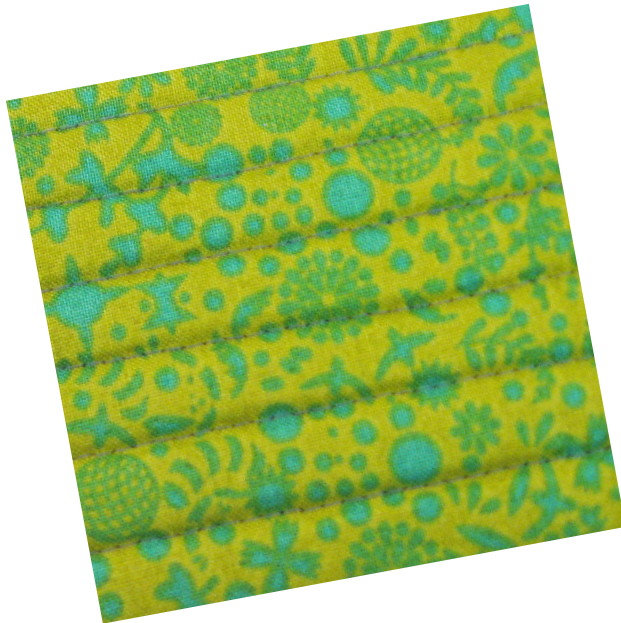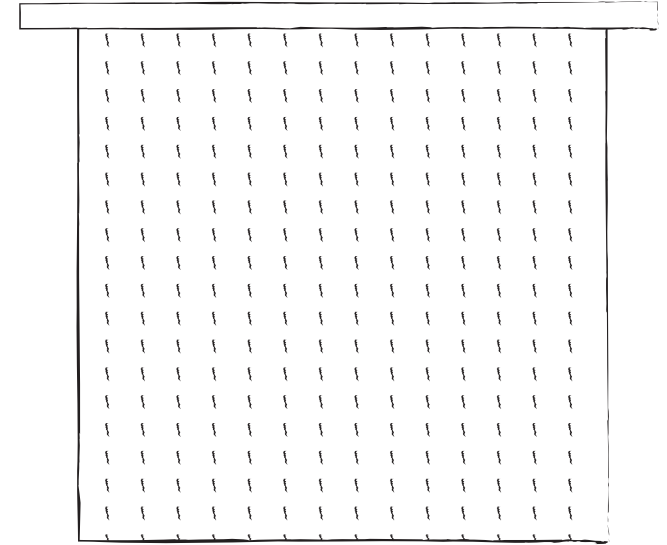

SUNGLASS COZY


FINISH IT!

Fold the project in half, right sides together. Attach Patchwork Foot #37 and using ¼" seam allowance sew the sides shut. Make sure to secure at the beginning and the end.

Attach Foot #1 and zig-zag the edges to prevent fraying. Make sure the right swing of the needle falls off the fabric. Adjust the stitch width and length as desired. These last two steps can be combined and done with a 4-thread overlock on a serger if desired.

Turn the project right side out and press. Tuck your favorite pair of shades inside and you are finished!

WANT TO ADD EMBROIDERY?

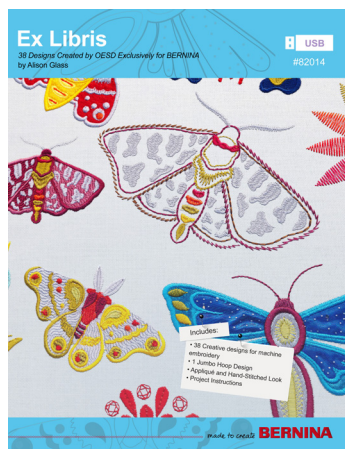


To add embroidery to your project, hoop a piece of the top fabric and Soft and Stable. Place design in the location desired and embroider the design.

Trim piece to approximately 9" X 9". Finished size will measure 8" X 8". The extra inch will allow for quilting. Quilt around the motif making sure to secure stitching and then follow through with binding and finishing.

The sample shown features a design from the **BERNINA Exclusive Collection Ex Libris #80080 by Alison Glass.**

Fabrics featured are from the **Alison Glass Sun Print 2016 Collection.**

Pattern is modified from **We All Sew's Sunglass Case by Juliette Lanvers.**

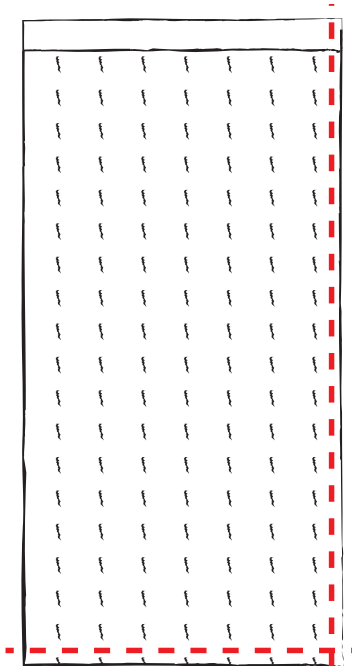

ETSY CRAFT PARTY

SERGER SNACK BAG INSTRUCTIONS



made to create **BERNINA**

SERGER SNACK BAG



MATERIALS



- BERNINA Sewing Machine
- BERNINA Serger/Overlocker
- Piping Foot #38
- 80/12 Microtex Needle
- Clover Wonder Clips
- Temporary Spray Adhesive
- Heat N Bond Lustre Iron-on Flexible Vinyl
- Two pieces of cotton fabric: 9" X 18"
- 4" of 5/8" wide sew-on Velcro
- Bodkin
- Mono-filament Thread
- Pressing Cloth
- 4 Spools of Serger Thread in Contrasting Color
- Rotary Cutter, Ruler and Mat

PREP IT!

- Cut two 9" X 18" pieces from the cotton fabric. One piece for the exterior and one piece for the lining.
- Cut two 7" X 15" pieces of Iron-on Vinyl. (This is the finished size. It is easier to center it on a larger piece of fabric than have the pieces be the exact size when applying the vinyl.)

Adhere the vinyl to the cotton fabric following the directions. Use a pressing cloth to make sure you protect your iron and ironing board. **Let the pieces completely cool before sewing.**

SERGER SNACK BAG

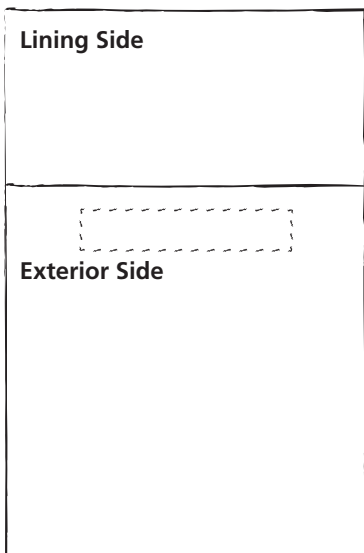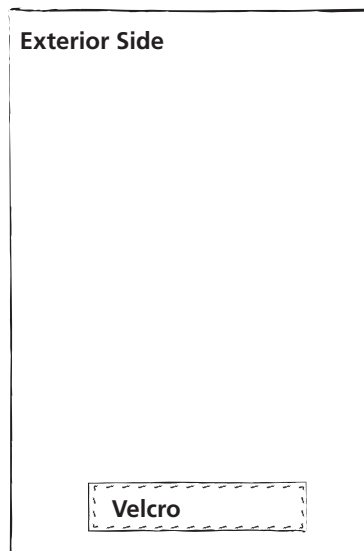

MAKE IT!

Trim the pieces to 7" X 15". Spray baste together the wrong sides together. This will create a combined piece of fabric that has vinyl on both sides.

Center the 4" of Velcro, hook side, ½" above the bottom edge of the bag. Attach Piping Foot #38 to the machine and thread with mono-filament thread in the top and bobbin (test the stitch first – some machines may need the tension adjusted). This foot has an uneven sole. Line up the edge of the Velcro so that it touches the left toe of the foot. The uneven sole will ride against the Velcro and with the needle in center position perfectly topstitch the Velcro in place. Stitch around all four sides and secure the stitch.

Using a 4-thread overlock stitch on the serger, serge the bottom edge of the bag. Fold up the bottom half approximately 6" and using the Wonder Clips, clip in place. Make sure that you crease the bottom fold and that the fabrics are not pinched together inside the crease.

Serge across the left and right side of the snack bag leaving serger thread tails long, making sure to catch all layers in the stitch.

Serge across the top of the bag leaving thread tails long. Tie off and tuck in your serged tails on all four corners. Use a tiny drop of fray check at each corner to prevent fraying.



SERGER SNACK BAG

FINISH IT!

Attach the loop side of the Velcro centered on the lining top leaving about 1/8"-1/4" below the serged seam. Using the Piping Foot #38 topstitch in place with mono-filament thread.

Create more in a variety of different sizes, fill with your favorite snacks and wipe down when needed!

Fabrics featured are from the Alison Glass Sun Print 2016 Collection.

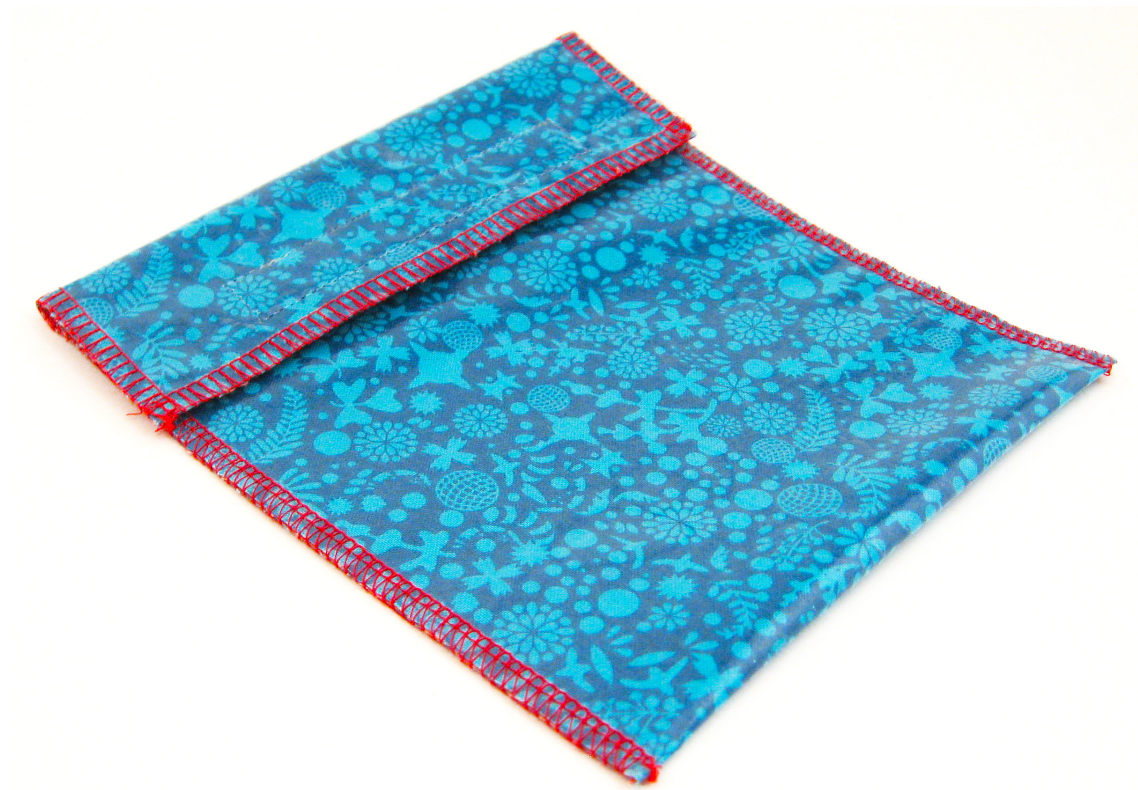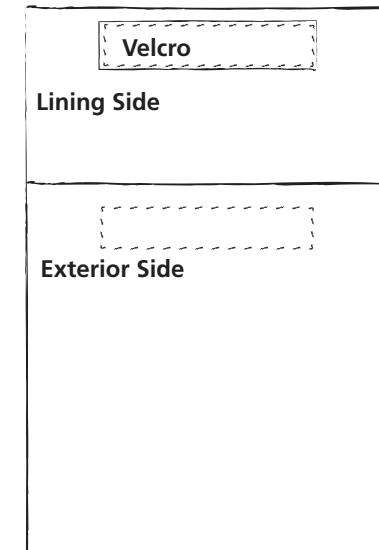

ETSY CRAFT PARTY

RIBBON CUFF INSTRUCTIONS



made to create **BERNINA**

RIBBON CUFF



MATERIALS

- BERNINA Sewing Machine
- BERNINA Free Hand System
- Edgestitch Foot #10
- Piping Foot #38
- 80/12 Microtex Needle
- Velcro 5/8" wide
- Clover Wonder Clips
- Temporary Spray Adhesive
- Kraft-Tex (at least 1/2" wider than ribbon and long enough to go around your wrist)
- Renaissance Ribbon of your choice long enough for wrist plus 2"
- Mono-filament Thread
- Rotary Cutter, Ruler and Mat

PREP IT!

Measure your wrist and write down the measurement.

- Cut the ribbon adding 2" to your wrist measurement. One inch for Velcro overlap and one inch to turn under.
- For the length of the Kraft-Tex add 1" to the wrist measurement for Velcro overlap. The width of the Kraft-Tex should be the width of your ribbon plus 1/2". The ribbon should have 1/4" of exposed Kraft-Tex on each side.

RIBBON CUFF


MAKE IT!

Attach the hook side of a 1" piece of Velcro approximately 1/8" to 1/4" in from the edge of the Kraft-Tex. Attach Piping Foot #38 to the machine and thread with mono-filament thread in the top and bobbin (test the stitch first – some machines may need the tension adjusted). This foot has an uneven sole. Line up the edge of the Velcro so that it touches the left toe of the foot. The uneven sole will ride against the Velcro and with the needle in center position perfectly topstitch the Velcro in place. Stitch around all four sides and secure the stitch.



Tip: Use spray adhesive or Wonder Clips when using Kraft-Tex. Pins will leave permanent holes in the Kraft-Tex!


Spray the back side of the ribbon with temporary spray adhesive. Center the ribbon down the piece of Kraft-Tex making sure it remains straight. Fold over each raw edge approximately 1/4" to 1/2". There should be a 1/8" to 1/4" border of Kraft-Tex showing around all four sides of the ribbon.



RIBBON CUFF

Attach Edgestitch Foot #10. Move the needle position as desired and edgestitch across all four sides of the ribbon.

Attach the loop side of a 1" piece of Velcro to the top of the ribbon on the opposite end of the other piece of Velcro. Attach Piping Foot #38 and sew around all four sides securing the stitch at beginning and end.



Press and steam the back side of the Kraft-Tex.

Tip: The Kraft-Tex will become more soft and pliable as it wears.



Ribbons featured are Renaissance Ribbons Kaffe Fassett Collection

ETSY CRAFT PARTY

CHALK CLOTH REVERSIBLE BUNTING INSTRUCTIONS



CHALK CLOTH REVERSIBLE BUNTING

MATERIALS

- BERNINA Sewing Machine
- BERNINA Free Hand System
- Edgestitch Foot #10
- Zigzag Foot with Nonstick Sole #52
- 80/12 Microtex Needle
- Clover Jumbo Wonder Clips
- Nifty Notions Chalkboard Fabric
- Assorted cotton fabric pieces at least 10" X 10"
- OESD Fuse n' Seal or Heat N Bond Lite (We used OESD Fuse n' Seal for a permanent seal!)
- 7/8" Grosgrain Ribbon (enough to cover your pennants and an additional 60")
- Assorted contrasting threads for pennants
- Topstitching thread for ribbon
- Rotary Cutter, Ruler and Mat



CHALK CLOTH REVERSIBLE BUNTING

CREATE PENNANTS!

- Cut two 10" X 10" squares from cotton fabrics (front and back)
- Cut one 8" X 8" square from chalk cloth
- Cut one 10" X 10" square of Fuse n' Seal

Fuse a piece of Fuse n' Seal to the back of a front pennant square with the non-paper side against the back of the fabric. Use a pressing cloth to prevent getting the fusible on your iron. Hold for 8-12 seconds to make sure seal is set. Let cool and then remove the paper backing. Fuse to the back pennant square making sure to adhere to the wrong side of the fabric. Make sure the pieces are completely fused! Repeat for each pennant.


Cut the fused pennants into triangles. Mark the center point (5") of the bottom edge of the square. Trim from the top corners to the center marking on the bottom creating the triangle shape. Repeat for each pennant.

TIP: Pinking shears can be used for a fun effect!


Cut the chalkboard cloth triangle. Mark the center point (4") of the bottom edge on the back-side of the chalkboard cloth. Trim from the top corners to the center marking on the bottom creating the triangle shape. Cut 1 for each pennant.

Using the Jumbo Wonder Clips clip the chalkboard fabric in place centered on each pennant.

TIP: Do not use pins when using chalkboard cloth – it will leave permanent holes in your cloth!

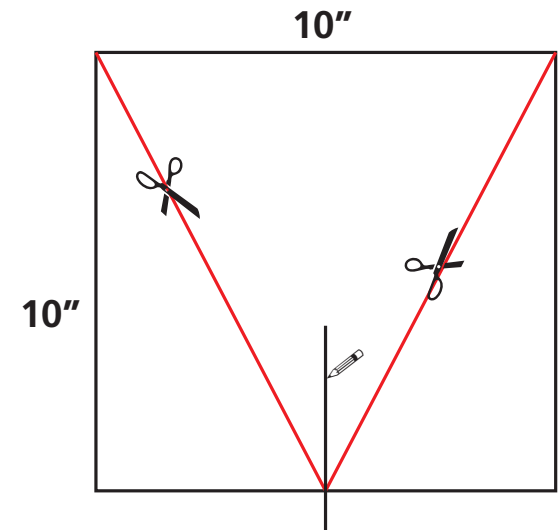


FUSED PENNANT

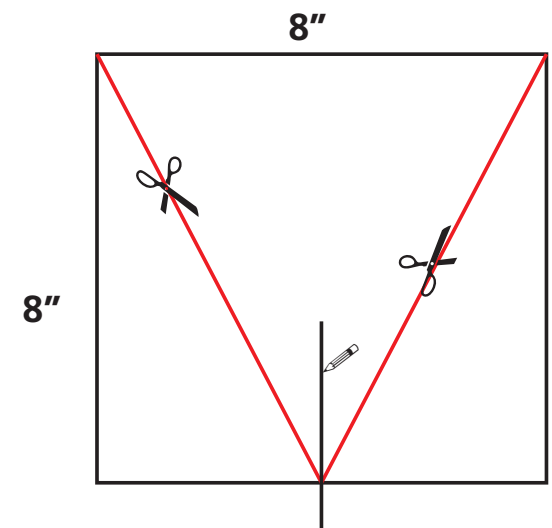

CHALK CLOTH

CHALK CLOTH REVERSIBLE BUNTING

Attach the Zigzag Foot with the nonstick Sole #52 to the machine. Using the edge of the foot as a guide Triple straight stitch #6 around the chalkboard triangle. Slow down as you approach each point and pivot using the BERNINA Free Hand System. Stitch all three sides making sure to secure at the beginning and end. Contrasting threads really pop on the black fabric.

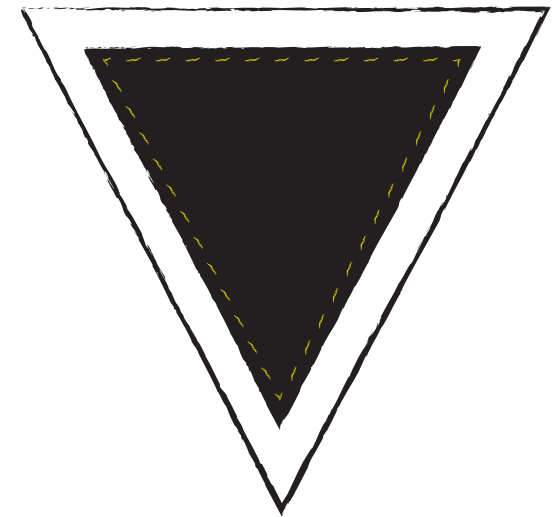

ASSEMBLE!

Layout your pennants as desired. Measure how much grosgrain ribbon will be needed to cover all pennants and add an additional 60" for the ends and ties.

Find the center of the ribbon and line up to the center of the bunting. (If you have an odd number of pennants you will line up to the center of a pennant. If you have an even number of pennants you will use the meeting point of the two center pennants.)

Attach the grosgrain ribbon as if it were binding. The ribbon should fold over and enclose the pennants.

Attach Edgestitch Foot #10 and adjust needle position as desired for perfect topstitching. Line up the fold of the ribbon with the blade of the foot. Stitch it in half all the way across the ties and ends as well.



CHALK CLOTH REVERSIBLE BUNTING

If you find it difficult to sew this in one pass baste the ribbon in place on one side of the pennants. Flip the ribbon over and clip with Wonder Clips to hold in place.

Then sew together using the blade of the foot and the needle position adjusted to topstitch together. Press the ribbon so that it lays flat.

Trim the ribbon on the ends at a diagonal and tie the ends. You can adjust the length of the ends as needed.

TIP: Before using chalk on the fabric prepare it first. Rub a piece of chalk over the fabric in an up and down direction, then from right to left. Wipe clean and repeat. After the second cleaning, your cloth will be ready to use.



Fabrics featured are from the Alison Glass Sun Print 2016 Collection

Pattern is modified from We All Sew's Chalk Cloth Flags post by Sue Bleiweiss