




SUPPLIES:


- Exterior wrap fabric (cut 12" x 36")
- Wrap lining fabric (cut 13" x 36")
- OESD PolyMesh CutAway Embroidery Stabilizer (one piece cut 20"x12")
- OESD Fusible Woven Lining (one piece cut 15" x 12")
- 16" square pillow form
- Isacord embroidery thread
- Superior Threads Bottom Line
- Three 1" buttons
- **OESD Point and Press Tool**
- Painter's tape
- KAI 4" Curved Needlecraft Scissors
- **BERNINA Maxi Hoop**
- Reverse Pattern foot #1D
- Button Sew-On Foot #18
- Design 80300-40 from BERNINA Exclusive Collection #80300 Celestial Lights by Amanda Murphy

Setup the Design

- Open the design file 80300-40 from the Celestial Lights by Amanda Murphy loaded on the USB stick.
- Select the Hoop icon and select the Maxi Hoop. Select the Grid icon twice to activate the grid and hoop center crosshairs. Close the Hoop Menu.

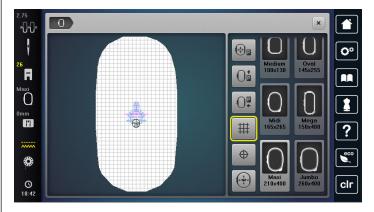


- Select the Information menu.
- Select Group/Ungroup. Select (-) to ungroup the design.

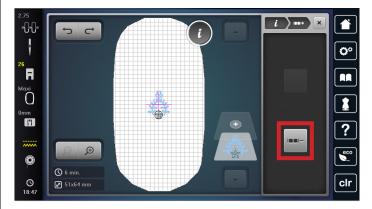


Select Layer 1 and select Group (+) until you see that the complete star design is on Layer 1, while the flourish remains separate on Layer 2. there are now only two layers in the design.





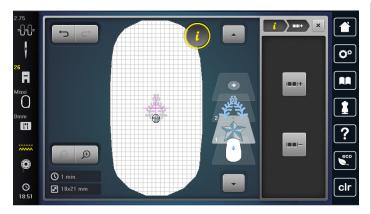


- Select the "i" in the breadcrumb navigation.
- With Layer 1 selected, select the Delete icon. Select the green check to confirm.

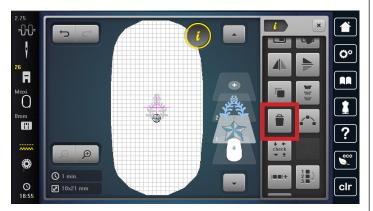


Using Shape Designer

Select Shape Designer.

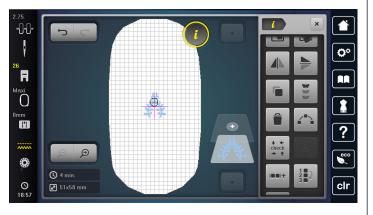


- Select the square base shape.
- Increase the number of designs in the shape layout to 8.
- Decrease the size of the shape to 65%.
- Select the green check to confirm.

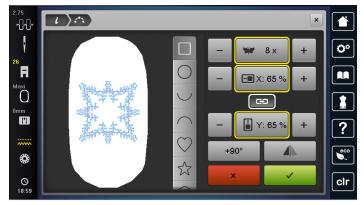

Customize With Lettering

Select Add Motif.

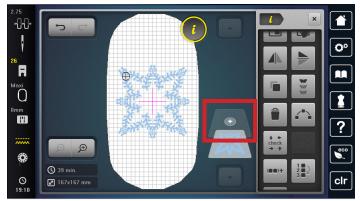

- Select the machine and the Alphabets folder.
- Select the Alice alphabet.

TIP: To determine the names of the alphabet folders, select the Help (question mark) soft key then select a folder. The name will be displayed on screen.





- Enter "JOY" using the keyboard. Select the green check to confirm.
- Select the Zoom In icon. Check the positioning of the newly added lettering. If needed, use the Multifunction Knobs to reposition.



- Select the Zoom Out icon.
- Select Rearrange Stitching Order.



- Select Layer 2 with the word "JOY"
- Select down arrow to move the lettering to stitch first.


TIP: Embroidering from the center out, when possible, will result in a better stitch out and the fabric will "push" out and reduce the chance of fabric puckering at the center.

- Select bottom layer.
- Close the Information menu.



Positioning the Design

- Following the manufacturer's instructions, fuse the OESD Fusible Woven to the wrong side of the exterior wrap fabric.
- Fold the fabric in half the lengthwise to determine the lengthwise center. Crease the fold. Then fold the fabric in half in the crosswise direction and crease the fold.
- Mark the vertical and horizontal center lines using a fabric marker or painter's tape.

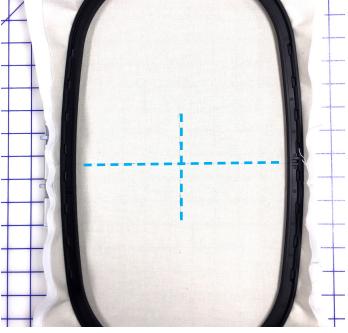



Hoop the prepared wrap fabric with two layers of PolyMesh Cutaway stabilizer into the Maxi Hoop. Use the Hoop Grid template to center the marked lines with the template markings.



- Select Information menu.
- Select Pinpoint Placement. When prompted, attach the hoop to the embroidery module.



- Select the Grid option for placement.
- Select the center node.



Use the Multifunction Knobs to move the center of the design to the marked center point on your fabric.




- Select the upper and lower center dots confirm their position along the vertical line. If necessary, use the Multifunction Knobs to nudge into position. Select Set to confirm and lock their locations.
- Select the needle icon to move to the stitchout screen.

Stitching Out the Design

At the stitchout screen, select the Cut Connecting Stitches icon to activate thread trims.



Press and hold the Start/Stop button to begin stitching.

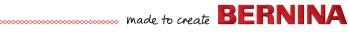




When stitching is complete, remove the project from the hoop and cut away excess stabilizer.




Sewing the Pillow Wrap

Place the embroidered panel right sides together with the lining fabric.


NOTE: The lining fabric is slightly larger, when you turn right sides out there will be a bit of it peeking to the front to create a faux trim.

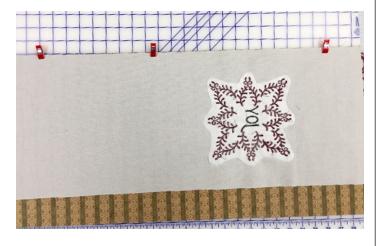

- Stitch using a 1/2" seam allowance along both of the long edges.
- Press seams toward the lining fabric. About 1/2" of lining on each side will show on the right side as the faux trim.
- Stitch the short edges leaving a 4 inch opening on one of the short edges to allow for turning right side out.

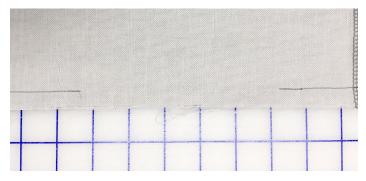

- Turn right side out and press.
- Stitch opening closed.
- To secure the wrap, overlap the ends 1 1/2" and stitch together using the Reverse Pattern Foot #1D. This turns the wrap into a continuous loop and secures with a "topstitched" look.
- Sew the three large buttons on with Button Sew-On Foot #18 to create a faux button closing.

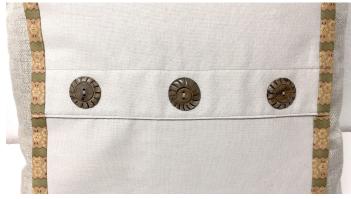

Slide the wrap over at 16" pillow and relax in style!

